


perma STAR VARIO LONG RANGE

Pocket Guide

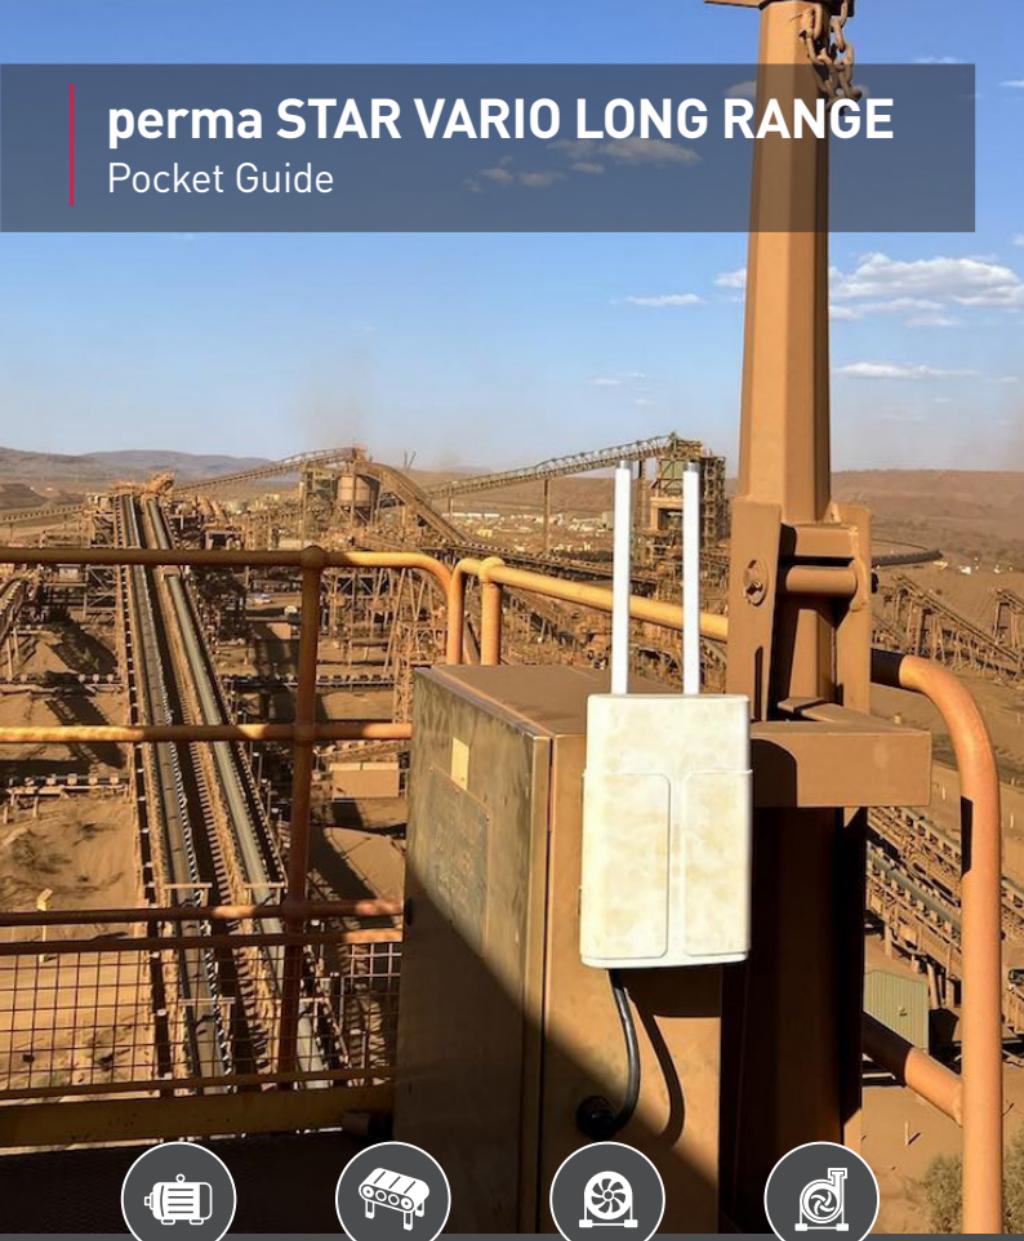

The Expert in Lubrication Solutions

perma

General Information

Other Drive Types


The operation of the perma STAR VARIO LONG RANGE lubrication system via the SET button, lubrication rates and general handling instructions are identical to other perma STAR VARIO products. For detailed instructions on manual operation of the perma STAR VARIO LONG RANGE lubrication system, refer to the perma STAR VARIO pocket guide.

General Information

System Design & Architecture

The perma STAR VARIO LONG RANGE system consists of four components, as described below

- 1 perma STAR VARIO LONG RANGE lubrication systems** - Smart automatic single-point lubricators with built-in LoRa® connectivity.
- 2 Gateway LONG RANGE** - LoRaWAN® gateways that relay messages between the perma STAR VARIO LONG RANGE lubricators and the perma LoRa Network Server (LNS).
- 3 perma LoRa Network Server (LNS) & perma CONNECT database** - The perma LNS receives, decrypts, and processes the messages, which are then addressed, stored and managed in the perma CONNECT database.
- 4 perma CONNECT App** - User interface / dashboard for remote monitoring and control of the perma STAR VARIO LONG RANGE lubrication systems. Free to use and available via smart device app or desktop web browser.

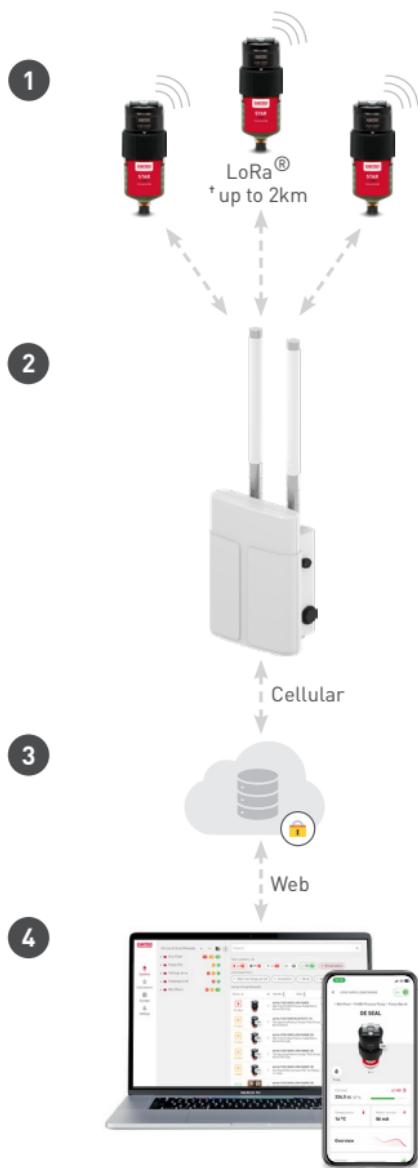

[†] LoRa communication up to 2 km line-of-sight. Dependent on a number of factors, including signal interference and density of obstructions/structures between the gateways and lubricators

Gateway LONG RANGE

Set-up & Installation

The Gateway LONG RANGE is a plug-and-play system that is pre-configured by perma. There is no need to attempt to connect to, configure, or modify the gateway in any way. **Do not press the physical "reset" button on the gateway as this will result in a complete factory reset.**


For the gateway to become operational, all that is required is for the user to:

- > Physically mount/install the gateway in a location with a strong cellular coverage.
- > Provide the correct power supply to the gateway.

Follow the below steps to successfully activate the Gateway LONG RANGE:

1. Packing List:

Before you begin the gateway installation, check the package contents to verify you have received all the below items.

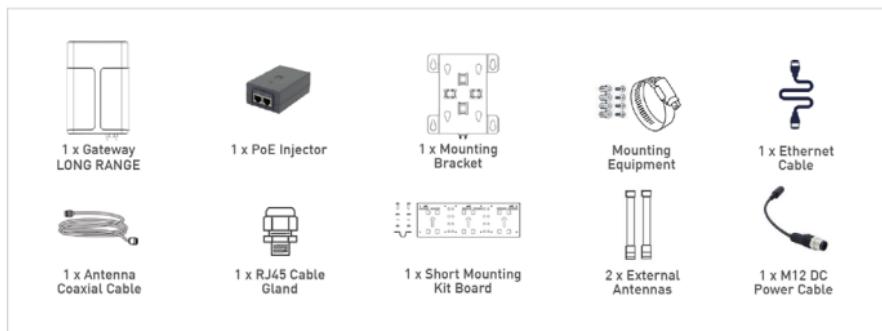


2. Power Supply Method:

Decide on power supply method. The Gateway LONG RANGE has two power supply options:

12V DC via provided M12 Connector



802.3af Standard PoE via provided PoE injector

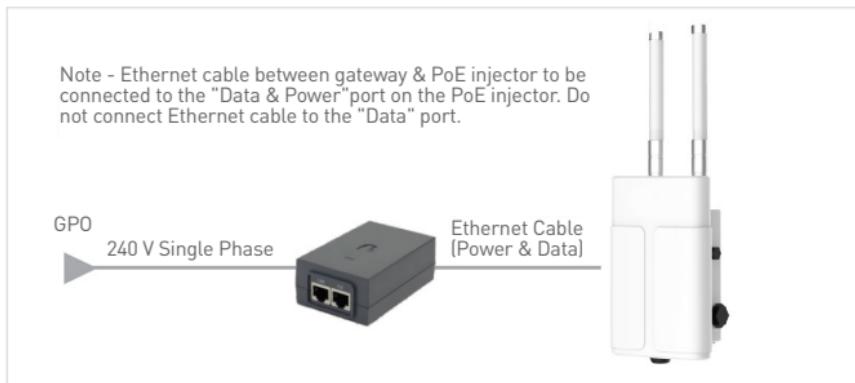

3. Identify suitable mounting locations based on the following criteria:

- a) Maximise cellular signal strength (Telstra).
- b) Minimise obstructions between the gateway and where the lubricators will be installed.
- c) Minimise distance from available power supply.
- d) The gateway is IP67 rated and does not require protection from the elements. However, if powered via the PoE injector, this component requires mounting within a weather-proof enclosure.

4. Determine mounting method:

The Gateway LONG RANGE can be mounted in the following ways:

Wall/Surface mount



Pole/Rail mount



5. Prepare ancillary/miscellaneous items:

The following items may be required to complete a best practice installation.

- a) Electrical conduit.
- b) Electrical enclosure to mount PoE injector (if applicable).

6. Assemble, install and check gateway:

- Install both external LoRa antennas.
- Mount gateway utilising provided mounting attachments.
- Provide power supply to gateway.
- After a few minutes, check the LED's on the underside of the gateway to ensure all 3 are green.



Success! Your gateway is now operational. It is now time to create your perma CONNECT company and start onboarding your STAR VARIO LONG RANGE lubrication systems.

perma CONNECT

Registration & Set-up

The perma CONNECT dashboard is utilised to monitor and control your perma STAR VARIO LONG RANGE lubrication systems. The perma CONNECT dashboard is free to download and use on desktop or smart devices.

It is recommended to:

- > Utilise the smart device app to onboard your perma STAR VARIO LONG RANGE lubrication systems into perma CONNECT.
- > Utilise the desktop version to build your company structure, monitor and control your perma STAR VARIO LONG RANGE lubrication systems.

The following sections outline the steps required to register a new account and start setting up your company structure.

1. Download and install the app on your smart device:

The smart device app is available to download from the App Store or Google Play.

App Store



Google Play




2. Joining a company:

If someone within your organisation has already created a company within the perma CONNECT app, they will need to invite you to this company.

Once invited, you will receive an email.

- > Follow the link in the email to register your account.
- > When registering, ensure you use the same **email address** and input the same **company name** that was specified in the email invitation.

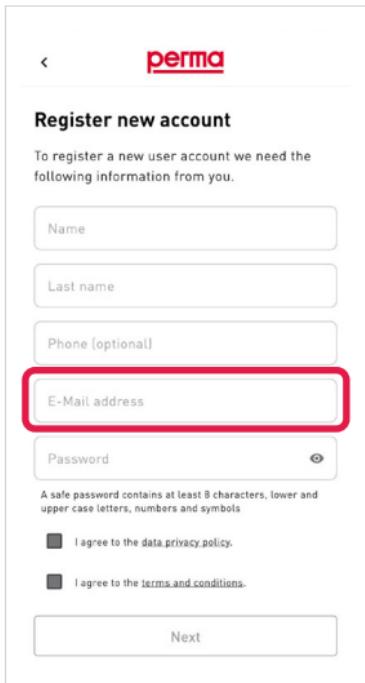

perma

Register new account

To register a new user account we need the following information from you.

Name

Last name

Phone (optional)

E-Mail address


A safe password contains at least 8 characters, lower and upper case letters, numbers and symbols

Password

I agree to the [data privacy policy](#).

I agree to the [terms and conditions](#).

Next

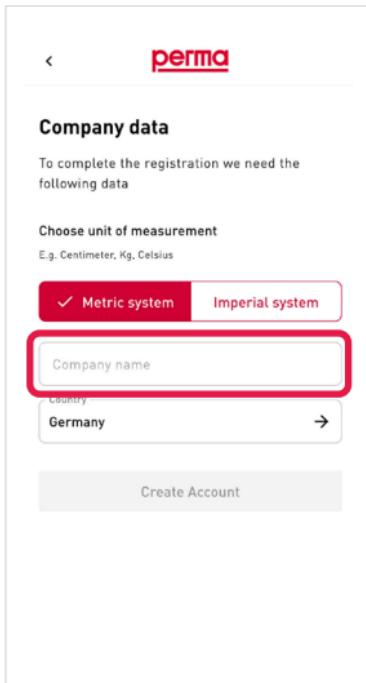

perma

Company data

To complete the registration we need the following data

Choose unit of measurement
E.g. Centimeter, Kg, Celsius

Metric system Imperial system

Company name

Country

Create Account

3. Creating a company:

If you are the first person in your organisation to register an account, open the perma CONNECT app or webpage and follow the prompts to register a new account.

A new company will be created from the company name that you input during the registration process.

This company can now be used to house the lubrication systems you wish to monitor/control within perma CONNECT.

perma CONNECT

User Management


The CONNECT User Management page is used to invite new Users, remove existing Users, or change User roles within the company.

There is no limit on the number of users you can invite to your company and User roles can help manage user access levels.

The User which creates the company profile will automatically be assigned as an Owner. Only Owners can access User Management.

To access User Management:

- > Navigate to the **Systems** tab.
- > Click the “...” symbol next to the company name.
- > Select **User Management** from the drop-down menu.

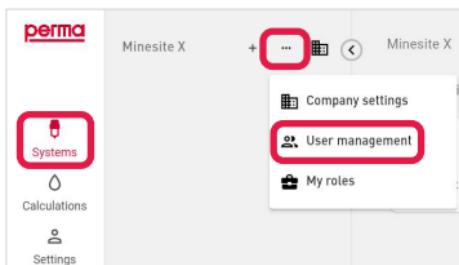


There are 4 levels of access that can be assigned in the User Management page. These are detailed below:

Owner	User	Changer	Guest
<p>Full access.</p> <p>Can manage users and edit company structure.</p> <ul style="list-style-type: none"> <input checked="" type="checkbox"/> Read data <input checked="" type="checkbox"/> Exchange LC's <input checked="" type="checkbox"/> Operate lubrication systems <input checked="" type="checkbox"/> Edit lubrication systems & lubrication points <input checked="" type="checkbox"/> Apply updates <input checked="" type="checkbox"/> Edit company structure <input checked="" type="checkbox"/> Create & assign tasks <input checked="" type="checkbox"/> User rights management <input checked="" type="checkbox"/> Invite users 	<p>Can create lubrication points and assign lubrication systems to these points.</p> <ul style="list-style-type: none"> <input checked="" type="checkbox"/> Read data <input checked="" type="checkbox"/> Exchange LC's <input checked="" type="checkbox"/> Operate lubrication systems <input checked="" type="checkbox"/> Edit lubrication systems & lubrication points <input checked="" type="checkbox"/> Apply updates 	<p>Designed for lubrication techs.</p> <p>Can adjust system settings.</p> <ul style="list-style-type: none"> <input checked="" type="checkbox"/> Read data <input checked="" type="checkbox"/> Exchange LC's <input checked="" type="checkbox"/> Operate lubrication systems 	<p>Read-only access.</p> <p>Can view systems and edit notes.</p> <ul style="list-style-type: none"> <input checked="" type="checkbox"/> Read data

Alternatively, Users can be added under a specific sub-folder within a company to limit their access to this section only. To invite users to specific sub-folders within a company:

- > Navigate to the **Systems** tab.
- > Click the "..." symbol next to the desired sub-folder
- > Select **User Management** from the drop-down.

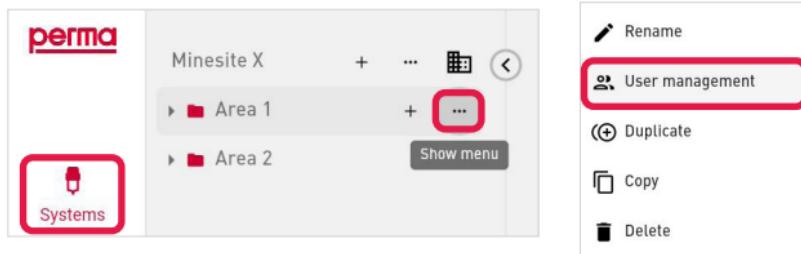

The screenshot shows the perma software interface. On the left, there is a sidebar with a red box around the 'Systems' icon. The main area shows a list of sub-folders under 'Minesite X': 'Area 1' and 'Area 2'. Next to 'Area 1' is a red box around the '...' button. A context menu is open on the right, also with a red box around the 'User management' option. The menu options are: Rename, User management (highlighted), Duplicate, Copy, and Delete.

perma CONNECT

Building Your Company


Your company structure is fully customisable and should be built to suit your companies specific needs (e.g. utilising existing asset naming conventions).

It can consist of any combination of **Location**, **Application** or **Other** (sub-folder) units in which **Lubrication Points** are located at the lowest level.

Lubrication Systems, such as perma STAR VARIO LONG RANGE, can then be assigned to these Lubrication Points.

The easiest way to build your company structure is via the desktop web application version of perma CONNECT as outlined below:

- > Access the web application - <https://perma-connect.com/#/login>
- > The "+" symbol creates a new sub-folder/lubrication point.
- > Click on the drop-down menu to select what to build.
- > Name the new sub-folder/lubrication point.

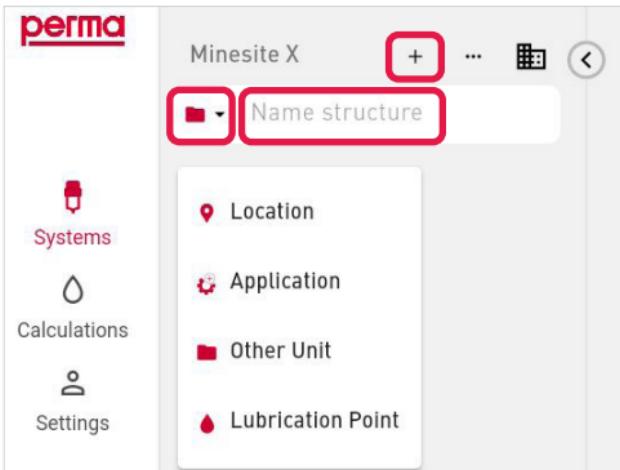


Clicking on the "+" symbol adjacent to a sub-folder will allow you to create units/lubrication points underneath this sub-folder. The example below shows another sub-folder being created underneath the "Area 1" sub-folder.



The "..." symbol adjacent to any sub-folder/lubrication point allows you to do the following actions:

- > **Rename** the item.
- > Enter the **User Management** page (sub-folders only).
- > **Duplicate** generates an identical item in the same location.
- > **Copy** allows the user to paste an identical item into any location.
- > **Delete** the item.

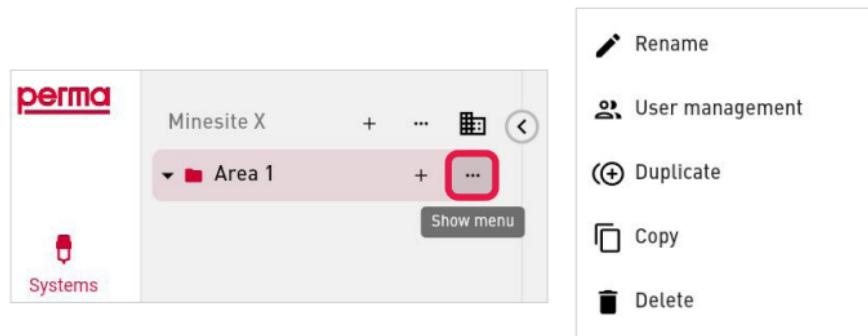


-  Rename
-  User management
-  Duplicate
-  Copy
-  Delete

TIP - Play around with creating and moving around folders & lubrication points. Your company structure can always be modified later on if required.

perma CONNECT

Notifications

Automatic email notifications for your user profile can be set-up in Settings > Notifications:

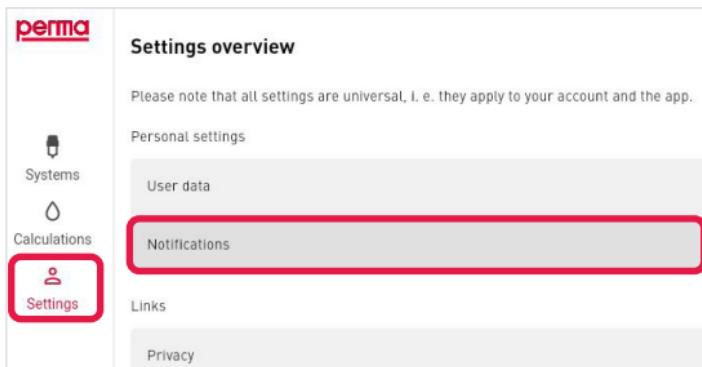

Notifications are not mandatory and can be turned ON or OFF at any time.


Two types of notification types are available, as described below:

- 1. Status updates** - an email notification of all lubrication systems that have transitioned into a state requiring action since the last status update notification.
- 2. Summaries** - a complete email summary of the state of all lubrication systems.

perma CONNECT

Company Settings

The company settings page is accessible by Owners only. It can be accessed by clicking "..." symbol adjacent to your company name in the Systems tab as shown below:

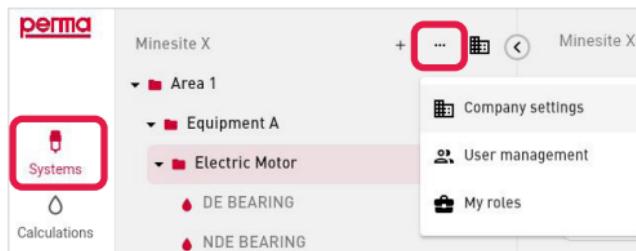

The following items can be edited under the company settings page:

1. Advanced warning time:

By setting an "Advanced warning time", systems that are coming up to an exchange will be flagged under the virtual status "Exchange Due Soon".

Example - Advanced warning time is set to 7 days. All lubrication systems that are within 7 days of requiring an exchange will be flagged with the virtual status "Exchange Due Soon".

2. Company details:

Company name and address details can be updated if necessary.

perma CONNECT

Onboarding Your perma STAR VARIO LONG RANGE Lubrication Systems

NOTE - onboarding perma STAR VARIO LONG RANGE lubrication systems is best completed on a smart device (mobile phone or tablet) via the perma CONNECT app. This will allow you to utilise the QR code scanning function.

You can add perma STAR VARIO LONG RANGE lubrication system to any lubrication point by following the steps outlined below:

1

Locations & structure

Minesite X + ...

▼ Area 1

▼ Equipment A

▼ Electric Motor

DE BEARING + ...

NDE BEARING

Show 0 results

Clear filter

2

Set-Up Assistant

In the next steps we will explain how to set up your lubrication system.

LONG RANGE Lubrication Systems



Bluetooth Lubrication Systems



Single-Point Lubrication Systems



3



Assemble lubrication system

Now put the parts together as shown in this image.


Okay

Don't show again

4

At this point, make sure you follow the procedures outlined in the **Appendix section (Page 22)** to assemble and set the physical drive unit prior to continuing in perma CONNECT.


5

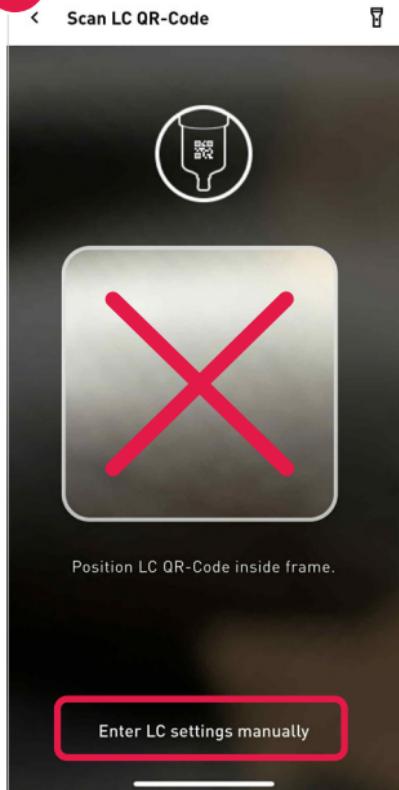

Do not scan at this stage of the process.


Instead select "Enter LC settings manually".

6

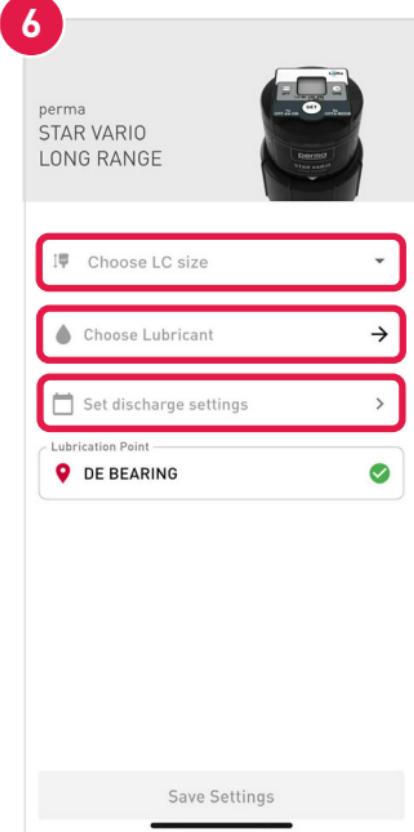


Input LC size, Lubricant, and Discharge settings.

7

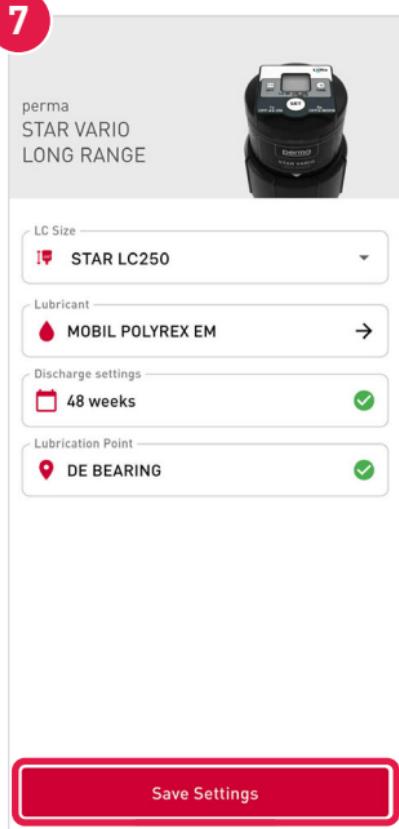

8

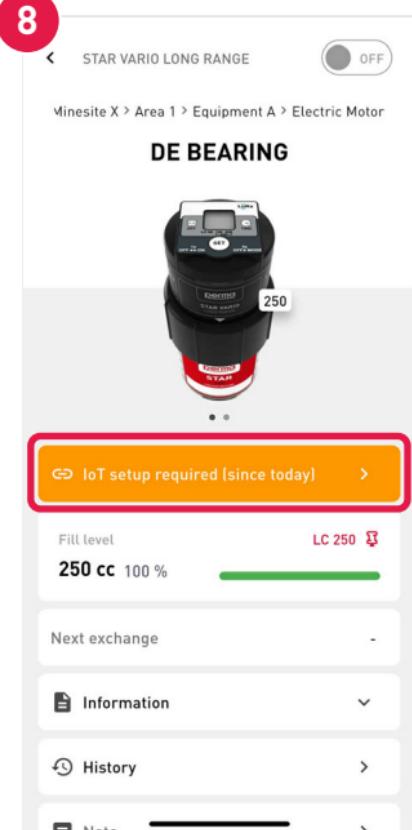


Select "Save Settings".

Select "IoT setup required".

9



10

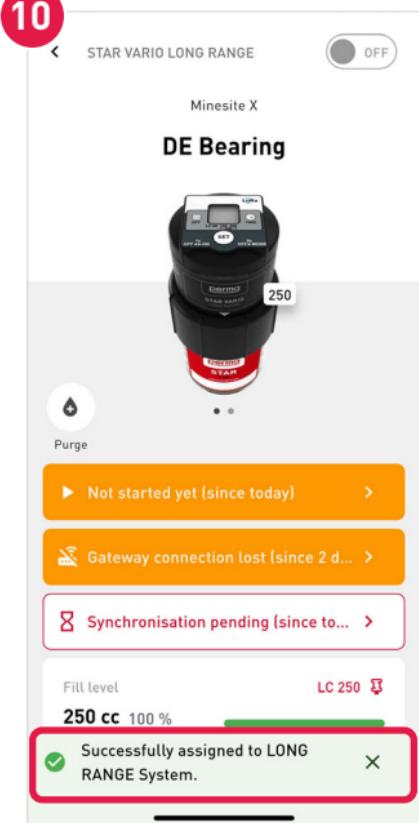

11

Scan your physical LoRa drive units QR code.

If you are ready to commence lubrication, the lubricator can now be turned on using the physical SET button. Alternatively, if you want to commence the lubrication cycle at a later date, you can turn the lubricator ON via the perma CONNECT app at any time.


Your physical perma STAR VARIO LONG RANGE unit is now successfully assigned to this lubrication point.

perma CONNECT

Monitoring Your Gateway LONG RANGE

Once your gateway is operational, and you have lubrication systems communicating with it, the Gateway LONG RANGE will be automatically populated into the gateway tab within perma CONNECT.

On the desktop version of perma CONNECT, the gateway tab can be accessed by utilising the toggle at the top right of the **Systems** page as depicted below:

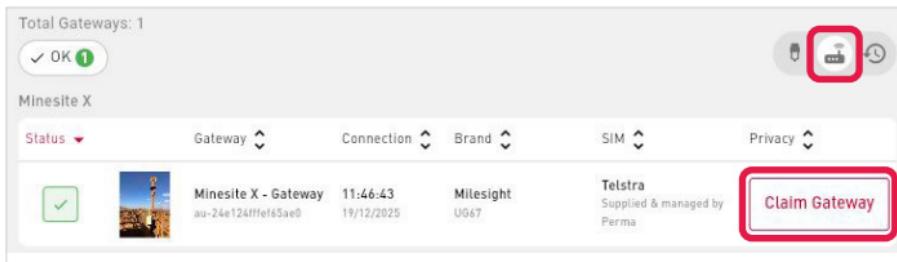


The screenshot shows the 'Systems' page with the 'Gateway' tab selected. The top navigation bar includes a 'Total Gateways: 1' indicator, an 'OK' button with a '1' notification, and a 'Claim Gateway' button (which is highlighted with a red box). The main table lists one gateway: 'Minesite X - Gateway' (ID: au-24e124fffe65ae0), connected to '11:46:43' on '19/12/2025', using a 'Milesight' SIM (ID: U067) supplied by 'Telstra'. The table has columns for Status, Gateway, Connection, Brand, SIM, and Privacy.

Status	Gateway	Connection	Brand	SIM	Privacy
	 Minesite X - Gateway au-24e124fffe65ae0	11:46:43 19/12/2025	Milesight U067	Telstra Supplied & managed by Perma	Claim Gateway

Once your gateway appears in the list, you can press the **Claim Gateway** button to assign this gateway to your company. Once claimed, the gateway will no longer be visible in any other companies gateway tab.

From the gateway tab you can monitor the status of your gateways. You can also provide a name and specify certain details for each gateway that is communicating with your lubrication systems.

On the smart device application version of perma CONNECT, the gateway tab can be accessed directly from the **Systems** page as depicted below:

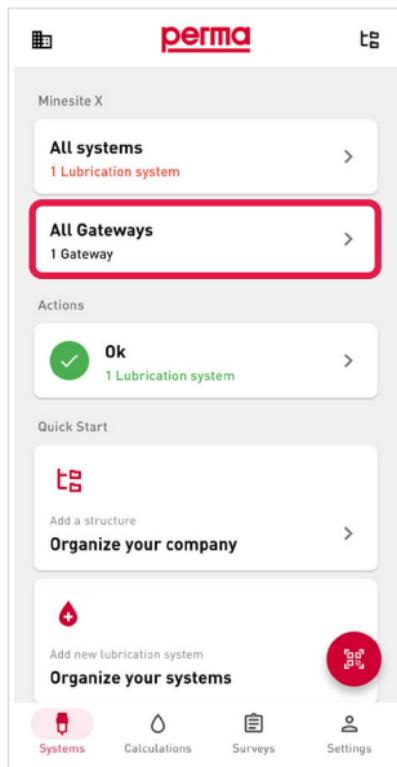

Appendix

Drive Set-up

The operation of the perma STAR VARIO LONG RANGE lubrication system via the SET button, lubrication rates and general handling instructions are identical to other perma STAR VARIO products. For detailed instructions on manual operation of the perma STAR VARIO LONG RANGE lubrication system, refer to the perma STAR VARIO pocket guide.

Battery Insertion

And Initial Assembly

The perma STAR VARIO LONG RANGE is set and controlled via a simple to navigate menu using a single SET button. The menu is intuitive and requires minimal manipulation after the initial setting.

Features which support simple operation and error minimisation include:

Initial set screen

A new lubricator displays . This forces users to SET the time and Lubricant Cartridge (LC) size before the lubricator can be turned on.


Automatic restart

When the LC and battery set is changed the lubricator automatically restarts. There is no requirement to use the SET button when servicing lubricators.

1

Insert battery set into the underside of the DRIVE. It will click into place.

The DRIVE will perform a self-test, during which the LED system will change from red to green to orange and the drive motor will run continuously.

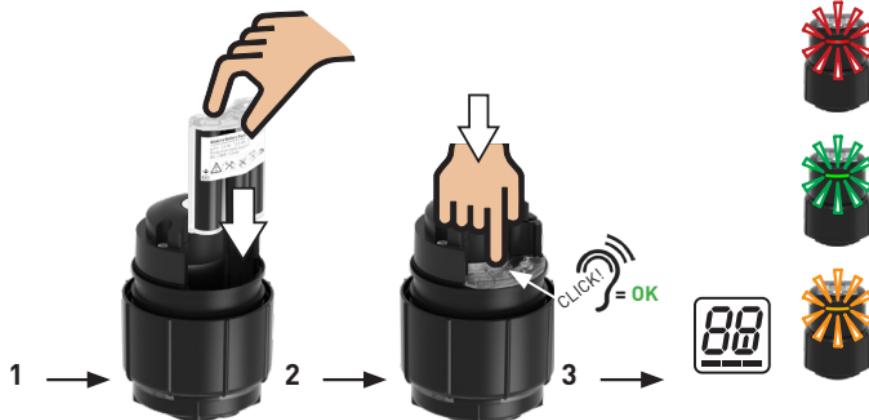


2

Place the DRIVE on top of the LC so that the socket of the DRIVE engages correctly with the hexagonal head of the LC spindle.

Secure it by rotating the collar until it comes to its stop point.

When correctly assembled the white triangle markings around the DRIVE will be visible as shown.

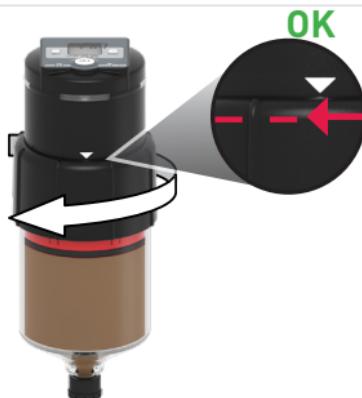

Setting For The First Time

The LC SIZE, TIME interval type (months or weeks) and TIME setting must be assigned for each new DRIVE before first use.

1


Insert a new battery set. The lubricator will perform a self-test and display .



= New DRIVE which
has not been set

2

The lines at the bottom of the display indicate the SIZE options of 60, 120, 250 and 500cm³. Press the SET button for 5 seconds and the lines will begin to flash. Release and press the SET button to scroll through the SIZE options. Stop at the required size.

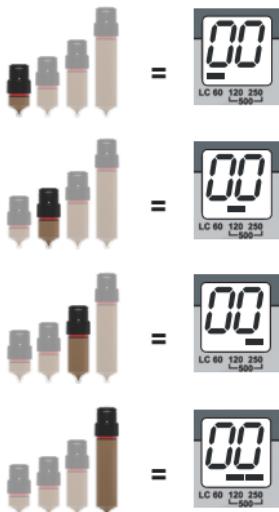


3

After assigning LC SIZE, wait for 'm' (months) to be displayed. Press the SET button to toggle between 'm' (months) and 'w' (weeks). Stop at the required TIME interval type.

**4**


Press and release the SET button to scroll through the TIME options. Stop at the required setting.

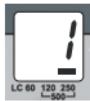**5**

Wait for the screen to go to the OFF status

Press the SET button for 1 second to turn the lubricator ON.

The setting will be displayed and after 8 seconds the lubricator will perform an initialisation run cycle.

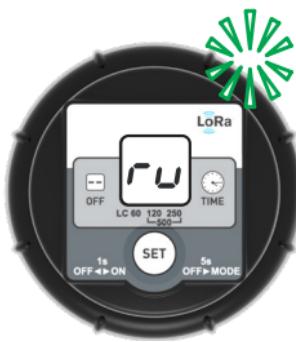

At the end of the run cycle the display will return to the allocated setting.



Example - 120cm³ set to 3 months.

Dispensing Rates

Weekly Settings

Time setting, weeks	Daily dispensing rate, cm ³ per day			
	60cm ³	120cm ³	250cm ³	500cm ³
1	8.57	17.14	35.71	71.43
2	4.29	8.57	17.86	35.71
3	2.86	5.71	11.90	23.81
4	2.14	4.29	8.93	17.86
5	1.71	3.43	7.14	14.29
6	1.43	2.86	5.95	11.90
7	1.22	2.45	5.10	10.20
8	1.07	2.14	4.46	8.93
9	0.95	1.90	3.97	7.94
10	0.86	1.71	3.57	7.14
11	0.78	1.56	3.25	6.49
12	0.71	1.43	2.98	5.95
13	0.66	1.32	2.75	5.49
14	0.61	1.22	2.55	5.10
15	0.57	1.14	2.38	4.76
16	0.54	1.07	2.23	4.46
17	0.50	1.01	2.10	4.20
18	0.48	0.95	1.98	3.97
19	0.45	0.90	1.88	3.76
20	0.43	0.86	1.79	3.57

This dispensing rate data applies to the perma STAR VARIO product range. Details on the dwell time between lubricant delivery cycles are available upon request.

Time setting, weeks	Daily dispensing rate, cm ³ per day			
	60cm ³	120cm ³	250cm ³	500cm ³
21	0.41	0.82	1.70	3.40
22	0.39	0.78	1.62	3.25
23	0.37	0.75	1.55	3.11
24	0.36	0.71	1.49	2.98
25	0.34	0.69	1.43	2.86
26	0.33	0.66	1.37	2.75
28	0.31	0.61	1.28	-
30	0.29	0.57	1.19	-
32	0.27	0.54	1.12	-
34	0.25	0.50	1.05	-
36	0.24	0.48	0.99	-
38	0.23	0.45	0.94	-
40	0.21	0.43	0.89	-
42	0.20	0.41	0.85	-
44	0.19	0.39	0.81	-
46	0.19	0.37	0.78	-
48	0.18	0.36	0.74	-
50	0.17	0.34	0.71	-
52	0.16	0.33	0.69	-

Dispensing Rates

Monthly Settings

This dispensing rate data applies to the perma STAR VARIO product range. Details on the dwell time between lubricant delivery cycles are available upon request.

Time setting, months	Daily dispensing rate, cm ³ per day			
	60cm ³	120cm ³	250cm ³	500cm ³
1	2.0	4.0	8.3	16.45
2	1.0	2.0	4.2	8.22
3	0.67	1.3	2.8	5.48
4	0.50	1.0	2.1	4.11
5	0.40	0.80	1.7	3.29
6	0.33	0.67	1.4	2.74
7	0.29	0.57	1.2	-
8	0.25	0.50	1.0	-
9	0.22	0.44	0.93	-
10	0.20	0.40	0.83	-
11	0.18	0.36	0.76	-
12	0.17	0.33	0.69	-


perma CONNECT

Other Features

Identifying your perma STAR VARIO LONG RANGE lubrication system:

There may be some circumstances where you may not know where a physical perma STAR VARIO LONG RANGE lubrication system is assigned within your company, and therefore not know which specific lubrication point it should be installed on.

In order to identify where this physical unit is assigned in perma CONNECT, follow the steps outlined below (to be completed on your smart device):

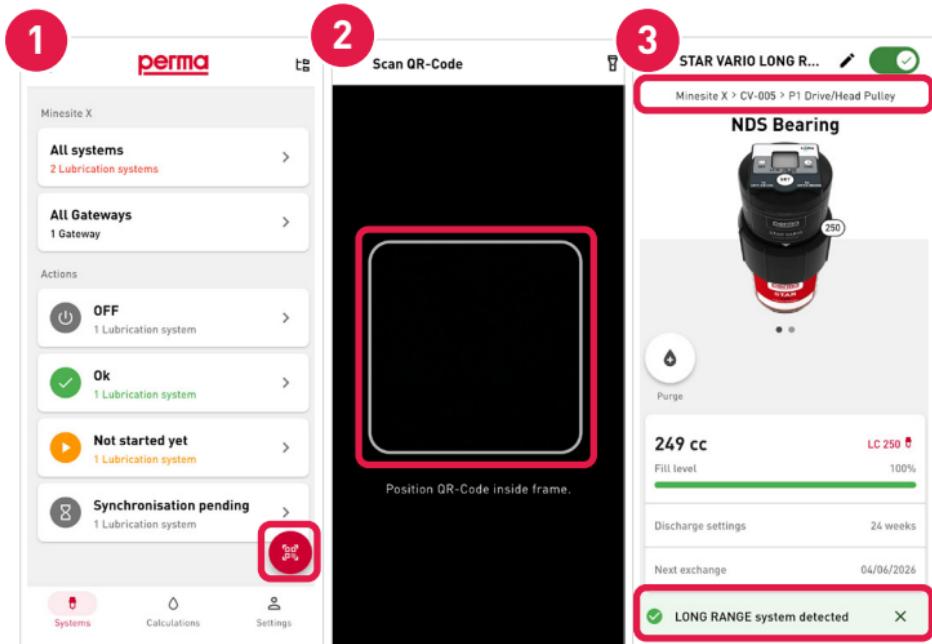

Click the circular red scan button at the bottom right of the home page.

Scan the physical drive units QR code.

If the drive unit is assigned in your company, you will be redirected to this lubrication systems page.



HTL perma Australia Pty Ltd
150 Highbury Road
Burwood, VIC 3125
AUSTRALIA

+61 3 9273 7700
technical@perma.com.au
www.perma.com.au



Scan for more
information